

# Installation Manual

## Multimastic SP




**1**




Make sure that the service penetration and the gap are free from dust, dirt and grease. Moisten the structure, if necessary.

**4**

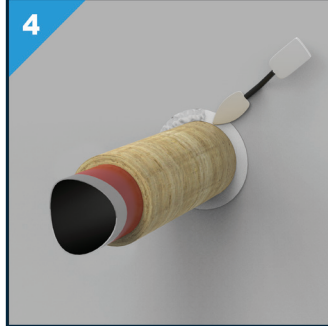

Smooth the joint with a damp spatula or filler knife.

**2**

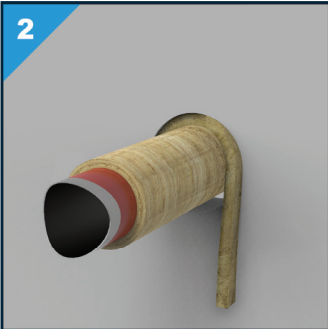


If backing is applied, cut it slightly wider than the gap width and make sure that it is applied to the correct depth in the structure.

**5**



Fill in the conformity statement and paste it next to the fireproof seal.

**3**

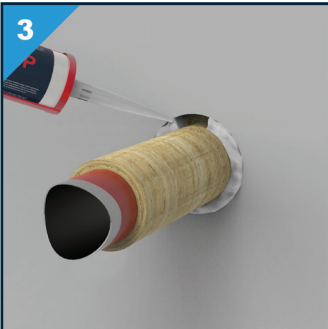

Apply Multimastic SP generously in the gap to prevent air bubbles.



### Information



For use and for more information about an application, refer to the Mulcol documentation and local and international approvals. See the **Mulcol Fire Protection app** for the correct application in combination with fire resistance, or use our selector at [www.mulcol.com](http://www.mulcol.com)  
For professional use only.

**MULCOL**  
INTERNATIONAL